 
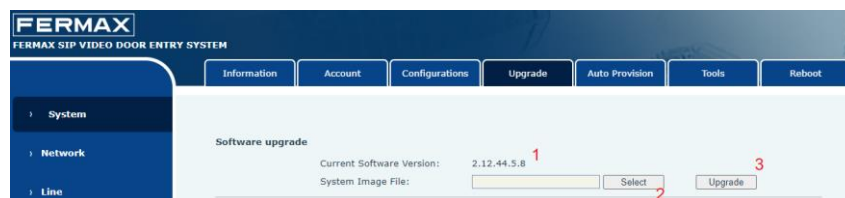 


To enjoy the latest features available, it is recommended to have the newest firmware version installed on the panel.
The firmware is common for all Marine SIP panel references.
Once the panel has been updated, the desired extra functionalities defined in the "changelog" document in the firmware location folder must be configured.

Update:


1. Check the latest firmware available from the technical page of the product in Fermax.com
 - 1.1. Download the zipped folder from the "Software" section.
 - 1.2. Inside the folder is the "changelog.txt" with the new functions and the changes we need to make to activate them.
 - 1.3. Extract firmware file "xxxx.z"; example:
2. Access to the panel's web server.
 - 2.1. Check the current version of your panel: System > information > software
 - 2.2. Select the file with the latest firmware: System > Upgrade > "select" and browse to the location of the downloaded file. Select the "xxxx.z".
 - 2.3. Upgrade; by pressing the Upgrade button the process starts. The process will maintain the previous panel configuration.



Configuration:

Check within the "changelog" document the changes applied for the desired firmware.
Depending on the new function you want to activate, you will have to configure the parameters described.
Example: Ring Back Tone activation:

- "Changelog":
 - 2.12.44.5.8
 - + Feedback tone
- Activation:
 - ^ See Intercom settings > Features > Tone Settings > Ring Back Tone = Mandatory Local Tone

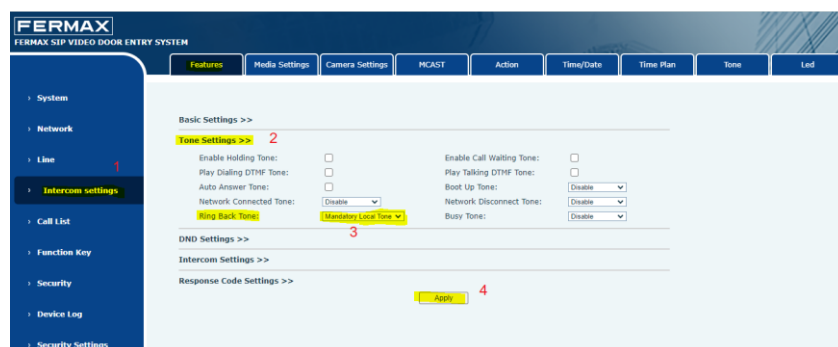

Note: For upgrades on panels without previous configuration, a "factory reset" is recommended to enable by default all the features added to the new firmware.

If you have any questions, please contact the technical department.