Anbindung LBM-650 mit Fermax Meet Monitor

1. Einstellungen am LBM-650

Die Turbinenstation verfügt über eine eingebettete Weboberfläche, die es den Benutzern ermöglicht, sich über einen Standard-Webbrowser anzumelden. Um die Station in Betrieb zu nehmen, müssen Ihr PC und die IP-Station über einen PoE-Switch mit Netzwerkkabeln miteinander verbunden werden:

 Verbinden Sie den PC mit dem PoE-Switch
 Verbinden Sie den PoE-Port der IP-Station mit dem PoE-Switch Wenn die Turbine Station mit dem Netzwerk verbunden ist, wird die IP-Adresse der Station automatisch auf eine von

Eine IP-Adresse wird von einem DHCP-Server abgerufen, falls vorhanden.

Wenn kein DHCP-Server vorhanden ist, wird eine IP-Adresse im Bereich 169.254.x.x zugewiesen. Um die Station ihre IP-Adresse vorlesen zu lassen, drücken Sie die Ruftaste, die Zifferntasten oder die DAKs auf der Station, wenn die Station noch nicht registriert ist.

Benutzer: admin Passwort: alphaadmin

Value 2

zwei Arten abgerufen:

2. Edge Configuration/ Direct Access Keys

Input 1: (nur zum Meet Monitor)

Call to <u>sip:101@Ip Adresse</u> (FERMAX MEET Monitor oder

Ringlist Setting (wenn Ruf zum Monitor und zum Fermax Sip Server)

Value 1 <u>sip:xxxxx@sip.fermax.com</u> (FERMAX SIP Server)

BENUTZERNAME und das PASSWORT finden sich auf einem Etikett/MEET-Monitor

Account / call Account Settlings • Account / call Account Settlings • Account / call Marcon • Marcon Marcon <th>Main Edge Configuratio</th> <th>Station Admi</th> <th>nistration</th> <th></th> <th>1</th> <th></th> <th></th> <th></th>	Main Edge Configuratio	Station Admi	nistration		1			
Account Settings Account Set								_
Audio Audio • Audio Funct Acreas Name Audio Totalia Totalia • Beelty Advess Name	> Account / Call	Account Sett	ings					
• Bind Access forgut Moha 1 Nak (all 15) Ito Studyet 3 Nak (all 15) Ito Studyet 3 Nak (all 15) Nak (all	+ Audio -		Function	_				
• Rulys / Oxford Eff. Acceser Colls Fifter Dir. No. Eff. Acceser Colls Fifter Dir. No. Eff. Acceser Colls Eff. Acceser C	· Direct Access Keys	Button 1	Idle: Call To			No Ringlist	×	~
Image: 10 and	+ Relays / Outputs		Call: Answer Call	~	Filter Dir. No.		El Answer	Group Call
Name Call Active Call / File Do No. EXacent Days Call Vide Bits > No. Brought v v value Call Extended > No. Brought v v Static Call Extended > No. Brought v v	Time	Input 1	Idle: Call To	~		Ringlist 2	×	~
Wood Payed 2 Rate (all 15) (in the length of the lengt			Call: Answer Call	~	Filter Dir. No.		Answer	Group Call
Add Message Call (b: Nothing w) W Ngel 3 Meller (all 15 w) No Broglet w) w Ngel 4 Meller (all 15 w) No Broglet w) w Ngel 5 Meller (all 15 w) No Broglet w) w Ngel 6 Meller (all 15 w) No Broglet w) w Ngel 6 Meller (all 15 w) No Broglet w) w Ngel 6 Meller (all 15 w) No Broglet w) w Ngel 6 Meller (all 15 w) No Broglet w) w Start Start No No Nodel 11 No No No Value 1 No No No Value 1 No No No	> Video	Input 2	Idle: Call To	~		No Ringlist	~]	~
Hopd 3 Max (pait 10 V No Roughet V V Hopd 4 date (pait 10 V No Roughet V V Hopd 4 date (pait 10 V No Roughet V V Hopd 5 date (pait 10 V No Roughet V V Hopd 4 date (pait 10 V No No Roughet V V Hopd 4 date (pait 10 V No No No No Hopd 4 date (pait 10 No No No No No Noted 11 No No No No No No No Value 1 impoint 10 No	 Audio Messages 		Call: Do Nothing	~				
See (26 Notifyer) V High 4 See (26 To V) Not Strepter V High 4 See (26 To V) Not Strepter V High 4 See (26 To V) Not Strepter V High 5 See (26 To V) Not Strepter V High 4 See (26 To V) Not Strepter V High 4 See (26 To V) Not Strepter V See (26 To Hothing V) Not Strepter V V See (26 To Hothing V) See (26 To Hothing V) Not Strepter V) See (26 To Hothing V) See (26 To Hothing V) Not Strepter V) See (26 To Hothing V) See (26 To Hothing V) Not Strepter V) Visite 1 See (20 To Hothing V) Not Strepter V)		Input 3	Idle: Call To	~		No Ringlist	×) [~
Hypel 4 Mail To V No Strongist V V Hypel 5 Call Exectivity V V V Hypel 6 Call Exectivity V V V Ringlist Settings V Salet Process Process Value 1 Exectivity 2 Ringlist 2 Process Process		Input 4	Call: Do Nothing	~				
Net Cate (be berling V Nepd 5 Max No No Broglet V V Nepd 6 Max No No Broglet V V Nepd 6 Max Cate (be building v) V V V No Cate (be building v) V V V V V Sett Ringlist Settings No No No No Valer 1 No No No No			Idle: Call To	~		No Ringlist	~	×
Neglet S Vec Call To V Vec Npdt 6 All To V No Broglet V V Npdt 6 All To V No Broglet V V Npdt 6 All To V No Broglet V V Ringlist Settings SAVE SAVE No No Value 1 Saved 12 Mon No No No			Call: Do Nothing	×				
Mark Call (Do Nothing Mayor & Mark (Call To Mayor & Mark (Call To Call (Do Nothing V Start Start Ringlist Settings Noine Market 1 Noine Market 2 Noine Value 1 Noine Value 1 Call (Do Nothing V)			Idle: Call To	~		No Ringlist	Ÿ	~
Nep 4 647 5 V 160 Regist V V Call (co Noting V Ringlist Settings Regist 1 Printon Regist 2 Printon Provided Printons Value 1 ep 001934/8 (pa fema)			Call: Do Nothing	~				
Volu Call: (So Noning SAVE Ringlist Settings SAVE Registration of the set of the s		in the second se	Idle: Call To	~		No Ringlist	×	~
SAVE Ringlist Settings Regist 1 Proces Regist 2 Proces Regist 3 Proces P		input e	Call: Do Nothing	~				
Value 1 sip 0019349g sip ferma .		Ringlist Setti	ngs	With	SAVE	With	Reading &	With
		Makes 1	sie 2010340 Raio farma	Previous	August 2	Previous	nangana a	Previous
Moher 2		value 1	sip.ou19349@sip.terma					<u> </u>
Walting County C		Value 2	sip:101@192.168.178.2			0	watum pahts ohna nicht	
Value 4		Value 2 Value 3 Value 4	50:101@192.168.178.2			0	warum gehts ohne nicht	0

sip:101@ IPAdresse (FERMAX Meet Monitor)

3. Einstellungen Relays Outputs

DTMF =

Account / Call Relay Settings	
Choose Relay To Configure: Relay 1	v
Oirect Access Keys Relay 1 Settings	
Relays / Outputs Description	Configuration
Time Remote Digit For Relay On:	· · ·
Remote Digit For Relay Off:	· · ·
Remote Digit For Relay Slow Flash :	· · ·
Audio Messages Remote Digit For Relay Fast Flash:	· · ·
Demote Dick For Date: Tooda:	
Remote Digit For Timed Relay On:	# (or M-key DFF) V
Timed Relay Duration:	3 seconds.
Colgony Kinging.	
Outpoint Call:	
Incoming Call:	
Corum Call (Edge mode cobd):	· · ·
should be the state of the stat	
idie:	0ff ~

4. LBM-650 Audioeinstellung Advance

Benutzer: admin Passwort: alphaadmin

- 1. Main / Recovery
- 2. Recovery / Advance configuration mode
- 3. Passwort 1851
- 4. Edge Configuration / Audio
- 5. Digital/ Analog Mic Switch Always Analog

	WEB CC			VINGTOR 🔶 STENTOFON
Main	Edge Configuration	Station Administration	Advanced Network	
Acc	count / Call	Audio Settings		
- Aud	dio	Description	Configuration	
→ Dire	ect Access Keys	Speaker Volume: Volume Override Level:	5 ~	Sets the volume during volume override. Volume and handset override happens during Emergency Group calls. $\hat{\mathbf{i}}$
 Relation 	ays / Outputs	Microphone Sensitivity /	5 ~	Default value 4. 0 = very low sensitivity
⊢ Tim ⊢ I/O ⊢ Vid	ne leo	Digital/Analog Mic Switch:	Always Analog 🔷 🗸	Default is Always Digital. Switch from Digital to Analog Mic based on settings. Analog I/O Pin: Viben I/O Pin is triggered, Analog Mic is used, when not Digital Mic is used. Analog I/O Pin Call End: Analog Mic is switched On (Digital Off) by first I/O Pin trigger in call and used until call end.
→ Adv	vanced Video	Digital/Analog Mic Switch Pin:	None ~	Input/Output Pin for Digital/Analog Mic switching. This doesn't affect other I/O pin configured functionality. NOTE: Pin must be configured as Input.
> Scr	ipt Upload	Mute speaker while analog mic:		Mute speaker while Analog Mic is used.
> Scr	ipt Configuration	Volume Control Ch1:	0	Audio Channel 1 Offset Gain (default routed to Amplifier/Speaker) Note! Shouldn't be used with accessories on TKIE Valid range: [-62+24] dB
> Auc	dio Messages	Volume Control Ch2:	0	Audio Channel 2 Offset Gain. (default routed to Line Out Amplifier) Note! Shouldn't be used with accessories on TKIE Note! In Standard Turbine ch2 is same signal as ch1 Valid ranne: I-62+24I dB
⊢ Mul	Iticast Paging	Noise Reduction Level:	0 ~	0 = disabled.
▹ Cer	rtificates	Force loudspeaker ringing:		Ringing is now always done on loudspeaker when ringing on badebones or badest

5. Meet Monitor Einstellungen

https://www.siblik.com/fileadmin/mam/medias/docus/99/F14721%20Installationsanleitung.pdf

Die Standard-IP-Adresse der MEET-Monitore lautet 10.1.1.1. Geben Sie die IP-Adresse des Monitors in die Adressleiste des Browsers ein.

User name: admin • Password: 6666

	O DOOR ENTRY SYSTEM				
DEVICE	1	DEVICE INFO			
GENERAL					
METWORK	FERMAX MEET MONITOR FIRMWARE: VOLDO				
IP CAMERA	DEV/CE 065-0600-0				
SIP	MAC 2012 10 11 00 01 212 IP 200 200 200 53				
ADVANCED	COPYRIGHT © PERMAX ELECTRONICA'S A U www.femax.com				
ACTUATORS	PROOF MUNIC				
VERIFICATION	PROGRAMMING				
PINCODE	SECTIONS				
RESTORE					

6. Meet Monitor DTMF aktivieren

Erweitert DTMF aktivieren

FERMAX		
MEET VIDEO TÜRKOMMUNIKATI	ONS SYSTEN	

HAUPTMENÜ		ERWEITERTE EINSTELLUNGEN
ALLGEMEIN		
NETZWERK	SIP NEBENSTELLE:	2 \$
IP KAMERA	URL:	Sip:0000000 @sip.formax.com
	URL:	sip:0010224@eip.felmex.com
SIP	AUTOMATISCHE ANTWORT:	
ERWEITERT	ONU(GPON)	0
RELAIS	DTMF AKTIVIEREN:	
	DTMF KEY:	#
EINSTELLUNGEN	ANZAHL	
BESTÄTIGUNG	FREIGESCHALTETER	(1
PINCODE	ICONS:	
TINCODE	ANZAHL AN KAMERAS:	0
LOGOUT		SPEICHERN

7. MEET ME APP

https://www.siblik.com/fileadmin/mam/medias/docus/165/1496-Man-Inst-APP-MEET-V11_20.pdf

Die MEET ME APP ist die App, mit der Sie Anrufe von MEET-Türstationen empfangen können.

Die MEET-Installation muss mit dem Internet verbunden sein.

Es ist eine kostenlose APP von Google Play oder Apple Store. Prüfen Sie die Verfügbarkeit der APP in Ihrer Nähe. Erfordert ein Mobiltelefon, das mit Android Version 8 oder höher und Apple Version 13 oder höher kompatibel ist.

Der BENUTZERNAME und das PASSWORT befinden sich auf einem Etikett auf jedem MEET-Monitor.



MEET ME mobile application

