

Safety instructions


Before operating the unit, please read this manual thoroughly and retain it for future reference. Failure to observe these instructions might damage the device. The device may only be installed and connected by professional electricians. All relevant rules and regulations valid in the country of use, as well as KNX guidelines, apply.

Description

Sentido KNX is a touch-sensitive switch compatible with all Sentido and Enzo fronts, either two-way or four-way. The separate touch-sensitive surfaces of Sentido each control various functions, such as switching, dimming, operating blinds, calling up and or saving scenes, using both short and long press. By touching more than one surface at the same time, additional comfort functions can be activated including room toggle, scene sequencer and RGB sequencer. The multicolour LED backlight provides status feedback and can be used as nightlight. Sentido also has a built-in temperature sensor and integrated thermostat logic. A scene controller can control up to 6 scenes and 8 outputs per scene.


Components

Sentido KNX
Model No. 200-02

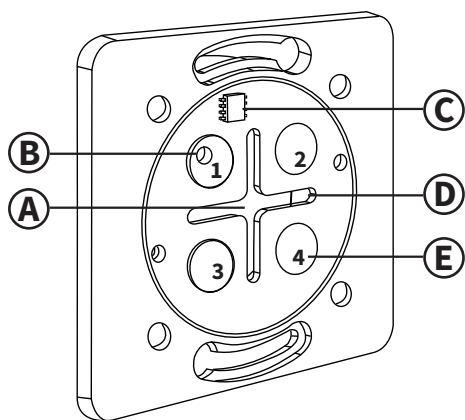


- A RGB LED
- B Programming button
- C Temperature sensor
- D Programming LED
- E Touch sensor (1-4)

Sentido front cover 2 way
Model No. 201-xx
(Not included)

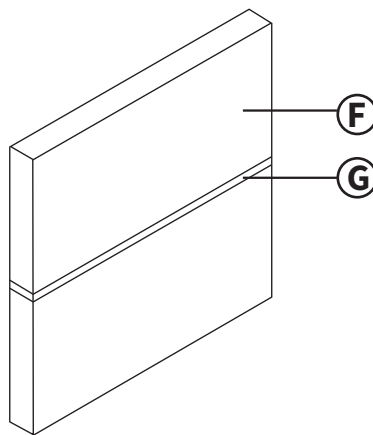

- F Touch-sensitive surface
- G Transparent window

Sentido front cover 4 way
Model No. 202-xx
(Not included)

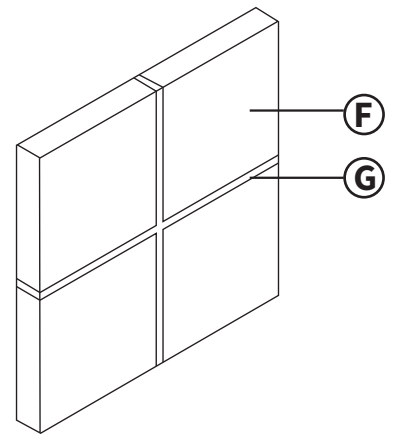

Important advice



- Never connect the device to 230 V.
- Avoid obstacles which might obstruct the proper mounting of the cover to the switch, such as round headed screws, plastering or textured wall paint.
- Installing a Sentido on a metal wall or a mirror surface might cause the device not to function properly.
- The minimum gap between 2 Sentidos must be at least 2cm, preferably 4 cm.
- Do not install any device nearby that might cause interference such as fluorescent lights or RF devices.

Installation and commissioning

- Use a standard European backbox with screws. The distance between the screws needs to be 60mm. The depth required is 24mm, however additional depth should be reserved for connecting the device.
 - Mount Sentido with the temperature sensor upwards. If not, make sure to indicate the position of the temperature sensor in ETS when commissioning the switch. Use screws with a countersunk, flat head and do not apply too much force as this might deform the plastic housing.
 - Connect the switch to the KNX bus according to the KNX guidelines.
 - Load the physical address into the Sentido switch from ETS via the KNX bus.
 - Commission the Sentido switch using ETS and load the configuration into the device.
- Note: When using the dual Sentido front cover, configure the switch as 2-fold in ETS, only sensor 1 and 4 will be used.

Note

Sentido can also be placed in programming mode by touching one surface and simultaneously tapping four times on the surface diagonally opposite this surface.

How to mount the Sentido front cover (Not included)

Only install the Sentido front cover while the switch is not powered.

Push the Sentido front cover firmly onto the Sentido switch. The front cover is fixed to the switch by the clipping system. Make sure the cover is mounted using all 4 clips.

Power the device once the front cover is mounted. Calibration will be initiated.

Calibration

In order to function properly, the sensors of the Sentido switch need to calibrate to the environment. This calibration starts when bus power is applied, when a cover is installed or can be forced when the sensors detect a touch for more than 40 seconds. During calibration the RGB led will light up blue and slowly fade up and down. Make sure not to touch the cover when the calibration process is ongoing! At the end of calibration the RGB led will blink green. The switch is now ready to be used.

LED feedback

When touching a single surface, the central LED turns white. Touching more than one surface at the same time will activate the multi-touch function and the LED turns orange as a visual feedback. The multicolour LED can be configured to provide visual feedback when using the scene sequencer and the RGB sequencer.





The LED can also be used as backlight to light up the switch in the dark.

How to remove the Sentido front cover

We provide the 'tube' tool to easily remove the Sentido front cover.



Do not use a screwdriver or other tools, as these might damage the cover.

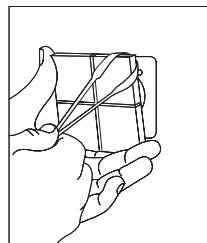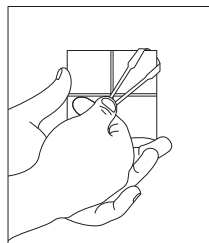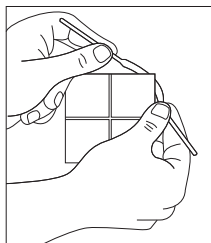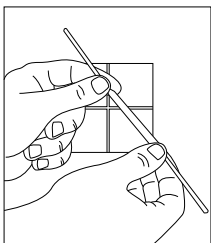

Technical data

Current consumption KNX bus: 10mA

Ambient temperature:

Operation: -5°C to 45°C

Storage: -15°C to 55°C

Transport: -15°C to 55°C

Environment: the device is designed for use up to 2000m above sea level (MSL).

Max. humidity: 93% relative humidity,
no moisture condensation

Protection class: II

Type of protection: IP 20

Certification: CE