
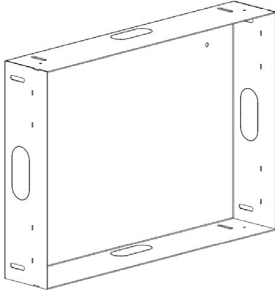


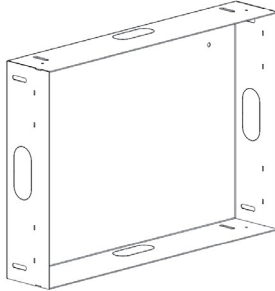

TZxx

Wall mount box

| Types | in wall flush mount box | in mortarless flush mount box |
|---|--|--|
| for TZ10 – 10,1" | MTZ10 | MTZ10T |
| for TZ15 – 15,6" | MTZ15 | MTZ15T |
| for TZ19 – 18,5" | MTZ19 | MTZ19T |
| Technical Data | | |
| Type of design | compact, stable and flat wall mount box for flush mounting | compact flush mounting kit for mortarless constructions |
| Dimensions [mm] | | |
| Cut-Out/fixing kit 10,1" | 281 x 189 x 80 | 281 x 189 x 80 / 287 x 189 x 80 |
| Cut-Out/fixing kit 15,6" | 428 x 291 x 80 | 428 x 291 x 80 / 434 x 291 x 80 |
| Cut-Out/fixing kit 18,5" | 507 x 330 x 80 | 507 x 330 x 80 / 513 x 330 x 80 |
| Weight | ca. 4kg | ca. 4kg |
| Mechanical Characteristics | | |
| Wall mount box | steel plate with cover for clean installation | steel plate with cover for clean installation |
| Cable access | 1xtop, 1xbottom, 1xleft, 1xright | 1xtop, 1xbottom, 1xleft, 1xright |
| |  |  |
| Grounding | the Wall Mount Box needs to be professionally grounded | |
| Montage / Installation instructions / Installazione | | |
| <p> Die Unterputzdose und das Trockenbaukit können in einem Ausschnitt in der Wand oder in einem bis zu 1,5 cm dünnen Möbelstück, sowie in einem Trockenbau befestigt werden. Der Ausschnitt muss den in den technischen Details spezifizierten Maßen entsprechen und beim Wandeinbau mindestens 9 cm tief sein.</p> <p>Im Wandausschnitt wird die Unterputzdose eingemauert, während sie im Möbelstück angeschraubt werden kann. Es ist wichtig, dass die vordere Kante der Unterputzdose plan und waagrecht zur Oberfläche der Wand oder des Möbelstückes ist.</p> <p> The wall mount box an the mounting kit may be installed in a cut out in the wall, in a wooden structure thick at least 1,5 cm or in a dry mortarless construction. The cut out has to respect the sizes specified in the technical data and has to be at least 9 cm deep.</p> <p>In the wall cut out, the box can become build in while it can be screwed on in a piece of furniture. It is important that the fore edge of the box is flat and horizontally to the surface of the wall or the piece of furniture.</p> | | |