


19" Rack Mount for Asano M3 & A4

Installation Manual


basalte

The **rack mounting kit (0719-06)** is used to install **Asano M3 (0703-03) & A4 (0702-04)** into an industry standard 19-inch equipment rack. This manual contains the instructions to install the mount.

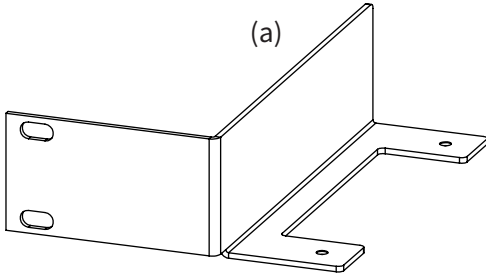

Parts list:

- 2 front rack mounting brackets: left (a) and right (b)
- 4 Phillips M3 x 10 screws (c)

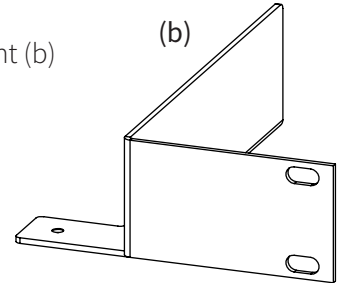

IMPORTANT

The complete set is one rack units tall. When installing the Asano M3, always allow sufficient free air flow around the enclosure. Never cover the rear cooling fan or the air intake holes located at the bottom of the Asano M3.

How to install:

1. Determine one unit rack space for Asano M3/A4. Prepare the rack by installing 2 cage or clip nuts (not included) at the front of the rack.
2. Place Asano M3/A4 upside down on a flat, stable surface with the front facing towards you.
3. Unscrew and remove the four feet (d) from the bottom of Asano M3/A4.
4. Secure both the left and right rack mount brackets (a and b) to Asano M3/A4, using the four Phillips screws.
5. Mount the Asano M3/A4 into the 19" rack using the rack screws (not included) to the corresponding cage nuts.

